



QUICKSTART Model RT3K

Whole House Fan Remote Control

The RT3 remote control controls the whole house fan using temperature or timer control. Temperature control optimizes your comfort and energy savings by never overcooling your home and only running the fan when needed.

Before operating your whole house fan, be sure to open windows and close fireplace dampers. Refer to your whole house fan manual for more information regarding operating your fan.



Visit eControlsUSA.com / Whole House Fan Controls for How-To video.

eControls

26072 Merit Circle #110 / Laguna Hills, CA 92653
949-916-0945 Fax 949-458-8502
www.eControlsUSA.com

TEMPERATURE CONTROL


Turn the Fan On

PRESS **ON/OFF** to turn the fan ON. The fan will run until the indoor temperature drops below the Set To temperature.

Adjusting the Temperature

PRESS Δ or ∇ to adjust the Set To temperature.

If ON is displayed but the fan is not running, make sure the Set To temperature is lower than the indoor temperature.

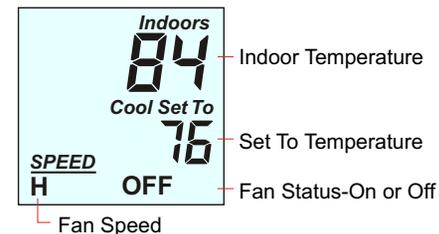

Safety Features in Temperature Control

The RT3 never turns the fan on unless the On/Off key has been pressed. In addition, there is a built in safety timer that runs in the background and will automatically turn the fan off after 8 hours in case you forget. The safety timer is adjustable.

Adjust the Safety Timer Hours

PRESS and HOLD **MODE** for about 7 seconds until first option is displayed. PRESS **MODE** until STimer is displayed. PRESS Δ or ∇ to adjust the safety timer hours.

See **Things to Know** for more information about your Remote.

Things to Know

Motion Activated Display

The backlight lights up when the remote is picked up and displays the indoor temperature, comfort temperature or timer, fan speed and fan status. You may hear the mechanism move around that controls this feature. The remote will then go back to "sleep" to maintain the battery life. If the display is dim or not lit, change the batteries.

Switching to Temperature or Timer Mode

When switching to Temperature Mode (press Mode then Down key) or Timer Mode (press Mode then Up key), the remote will automatically turn the fan OFF as a safety precaution. Once the new mode is selected and the backlight goes off, press the On/Off key to turn the fan ON.

Starter Battery Replacement

The remote is supplied with alkaline starter batteries. We highly recommend replacing the alkaline batteries with 2 AAA lithium batteries for longer life and better performance. Remove the four screws on the back of the remote to access the battery compartment.

Optional Outdoor Temperature Sensor

An optional outdoor temperature sensor can be installed to delay whole house fan operation when the outdoor temperature is too warm to provide to cooling. For more information, visit eControlsUSA.com

Get The Most Out of Your Fan

Cool Your Home with Free Cooling

When the outside air temperature is cooler than the inside temperature, turn off the A/C and turn on your whole house fan to bring in the cool, outside air and use up to 90% less energy compared to A/C.

Ventilate Your Home

The whole house fan circulates fresh air throughout your entire home, up to 30 air changes per hour, depending on the type of fan, to control mold, mildew, allergens and airborne viruses.

Exhaust Odors From The Home

Cooking and pet odors can linger in a home for quite some time. Use the whole house fan to exhaust the odors and freshen the air.

Reduce Moisture In Your Home

During the winter months, moisture can build up in the home which can lead to mold growth. Use the whole house fan to periodically circulate fresh air throughout the home and attic.

Warm Your Home

During the winter, if the indoor temperature of the home is uncomfortably cool but the outside temperature is pleasant, instead of turning on the heater, use the whole house fan to bring in the pleasant outdoor air.

TIMER CONTROL

Switch To Timer Control

PRESS **MODE** then the Δ key to select Timer Control. To return to Temperature Control, PRESS **MODE** then the ∇ key.

Turn the Fan On

PRESS **ON/OFF** to turn the fan ON. The fan will run for the timer interval displayed.

Adjusting the Timer Setting

PRESS Δ or ∇ to adjust the current Timer Setting. Or, to set your preferred Timer Setting, make sure the fan is Off and then PRESS Δ or ∇ to adjust the timer setting. This timer setting will be used each time the fan is turned on.



SPEED CONTROL

PRESS **SPEED** then PRESS Δ or ∇ to adjust the fan speed. Available fan speeds depends on the type of fan installed.

SET OUTDOOR LIMIT

If the optional TS3 Outdoor Temperature Sensor is installed, the default Limit of 80° can be changed. PRESS and HOLD **MODE** for about 7 seconds until the Outdoor Temp Limit is displayed. PRESS Δ or ∇ to adjust the outdoor temperature limit.